

Description: each time,after chainsaw plate/bar goes back to original position,set 1 second to release residual pressure of throttle valve and hydraulic cylinder.so there isn't any residual pressure of chainsaw plate/bar when cutting.


Here are steps of changing parts

1.Disassemble hoses and nipple with rod cavity of cutting cylinder ,changing to new received nipple and hoses



Add 1/2 tee connector to tee connector on the front of filter

2、reconnect wire of original switch of chiansaw plate lubrication

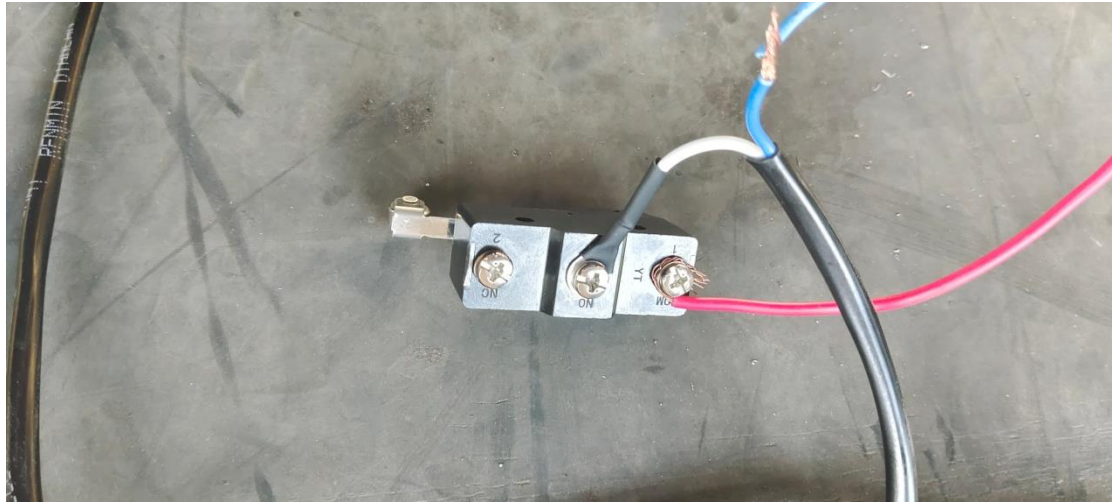

Every time chainsaw plate/bar goes back to original position, it will activate the solenoid valve for about 1s by inching switch, then close.

3、 example of changing.



